



WHAT'S INCLUDED

OPTIMA SIDEKICK RUNNING BOARD


INSTALLATION MANUAL

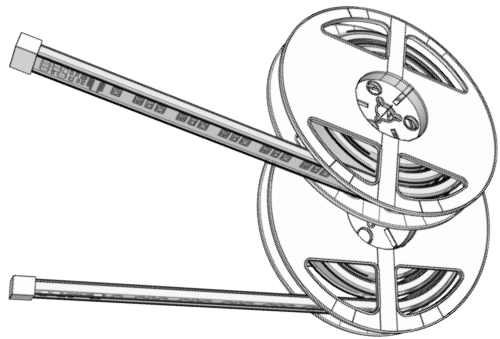

LED STRIP (X2)

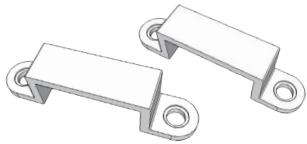

BRACKETS (X6)

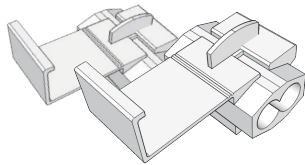

SCOTCHLOKS (X4)



ZIP-TIES (X10)



ADHESIVE BOOSTER



INSTALLATION STEPS

STEP 1

Open your package, and verify that you have received all items (see section titled 'Package Includes').

Optional: Test your strip first by following Step 5 before mounting.

STEP 2

Thoroughly clean the surface where you plan on mounting the LED strip. (A dirty surface will prevent the strip from attaching firmly.)

STEP 3

Wipe the mounting area with the included adhesive booster.

STEP 4

Firmly press the LED strip to the mounting area, and hold for 3 seconds.

Optional: Screw on the included brackets to strengthen hold.

STEP 5

To power the LED strip, find your vehicle's corresponding wiring:

RED  » 12V+ Parking Lights

BLACK  » Ground Wire

YELLOW  » 12V+ Turn Signal

WHITE  » 12V+ Door Assist

Optional: Use included Scotchlocks to crimp the wires.

Note: Additional wiring may be needed for longer vehicles.

STEP 6

Use included zip-ties to tuck away excess wiring.