



# INSTALLATION GUIDE

2012-2015


TOYOTA TACOMA  
PROJECTOR HEADLIGHTS

## Tool required :

- 10mm Socket




Product damage resulting from improper installation is NOT covered by warranty. If you are inexperienced with aftermarket upgrades, professional installation is recommended.

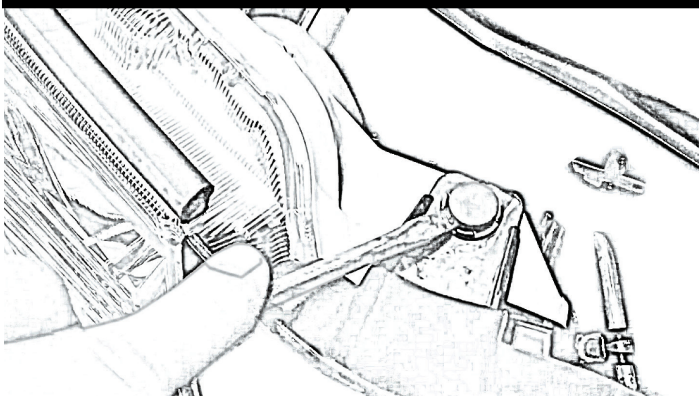


### Step 1

Prop open the hood of the vehicle, and remove the clips securing the grille (4 clips total).

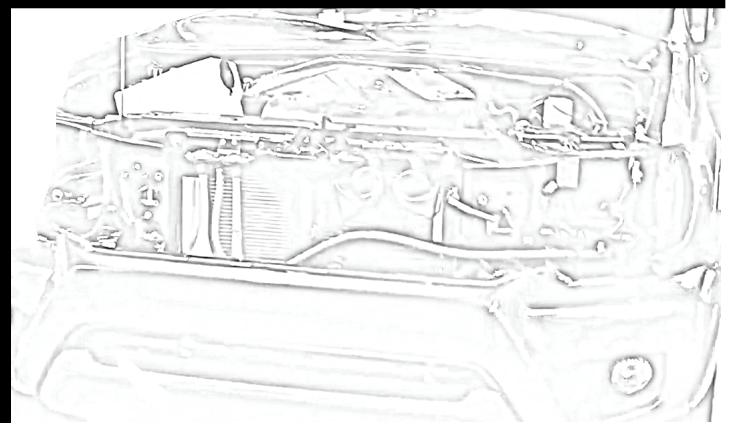


### Step 2

Carefully detach the grille from the bumper.

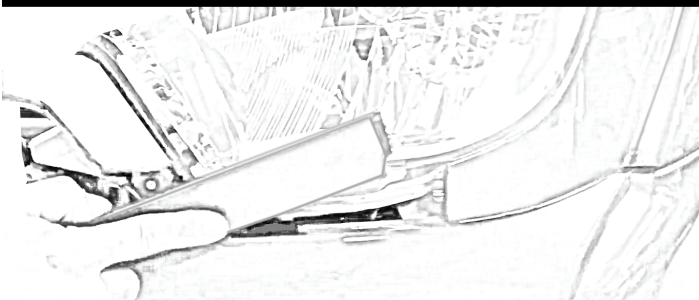


### Step 3

Detach the plastic piece beneath the stock headlight by pulling it towards the center of the front of your vehicle.

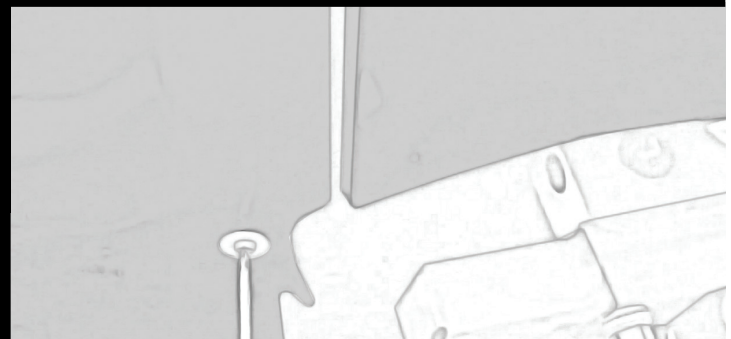


### Step 4


Remove the bolts along the bottom on either side of the bumper (2 on each side for a total of 4 bolts).

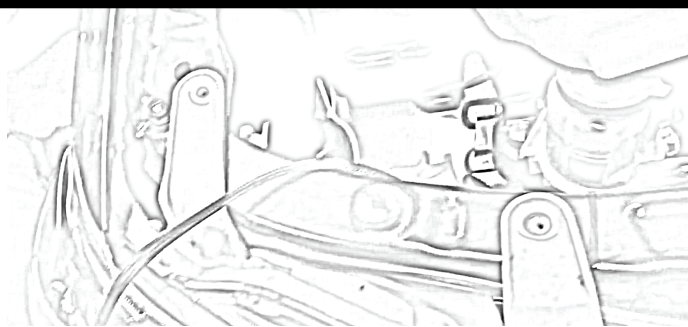**Step 5**


Remove the bolts securing the stock headlight (3 bolts total).

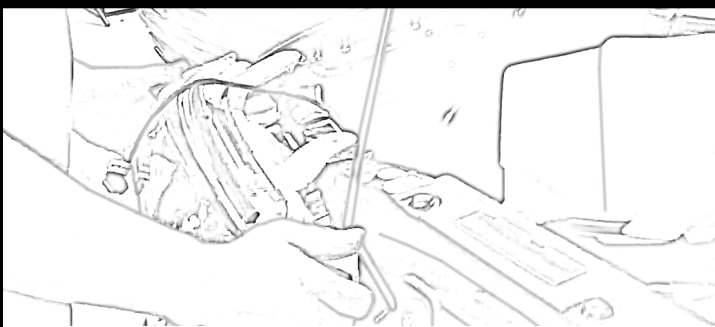**Step 6**


Carefully detach the stock headlight from the vehicle.

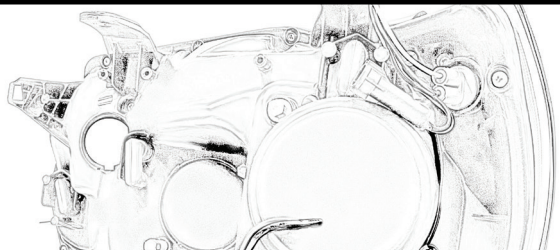**Step 7**

From the back of the stock headlight, remove the turn signal harness, parking light harness, and low/high beam harness.

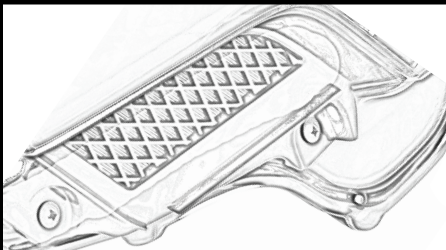**Step 8**

Detach the plastic piece located on the side of the stock headlight.

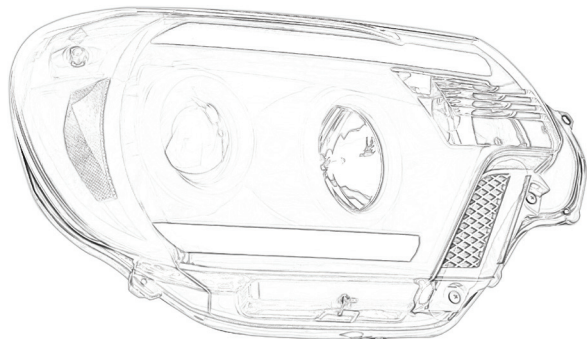**Step 9**


Re-install the plastic piece removed from the previous step onto your new REX headlight.

**Step 10**

Re-install all harnesses into the REX headlight, and secure the headlight in your vehicle by replacing all bolts.

**Step 11**

After installing both REX headlights and re-installing all other vehicle parts, you are now ready to go!

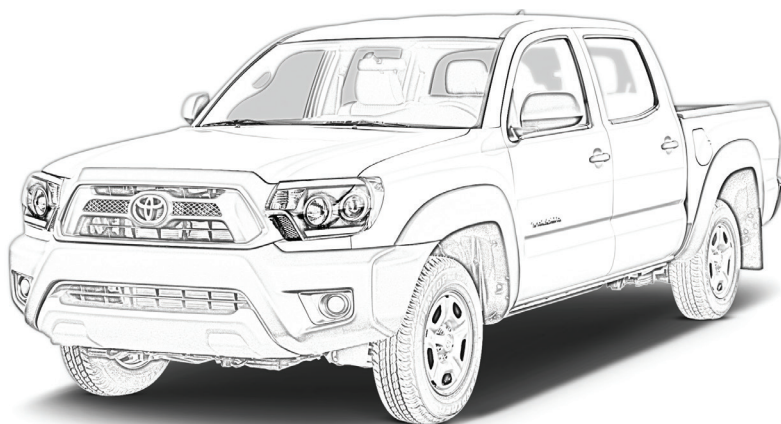



## **Disclaimer**

REX Lighting is not liable for damages, injuries, or death while installing the product. The Installation Guide is intended as assistance to reduce installation time. REX Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional installation.